

SOLDERLESS MODCHIP INSTALLATION GUIDELINE


THIS STEP OF THE INSTALLATION IS ABSOLUTELY CRITICAL, AND REQUIRES PATIENCE. FAILURE TO USE FINESSE TO INSTALL THE CLIP COULD RESULT IN DAMAGE TO THE PINS OF THE CPU OR THE CLIP.

Gently lay the modchip's clip onto the CPU of the CG2 circuit board. Without applying pressure, gently move the clip around on the CPU until the clip is covering about $\frac{1}{2}$ of the pins of the CPU on ALL FOUR SIDES.

Note the picture below shows INCORRECTLY POSITIONED CLIP. Notice how the modchip does not evenly cover $\frac{1}{2}$ of the pins on all four sides:



In the photo below, the clip is evenly covering $\frac{1}{2}$ of the CPU pins on all four sides. Once the modchip is sitting in this position, to a gentle touch it will feel as if it has “locked in”.

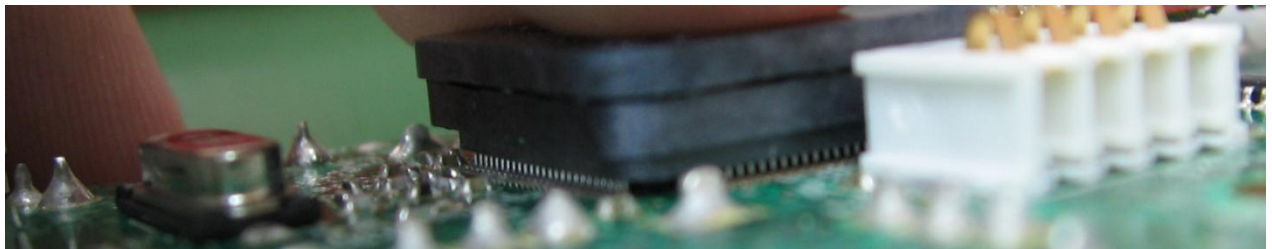

Check, check, and check again that the clip is evenly covering the CPU pins on all four side. Then when ready, push down evenly on the cap of the clip to seat it fully over the CPU:



The modchip is now seated and we are ready to connect more wires as necessary.